

Instructions

RJLOCKDOWN / RJ45 Jack Lock

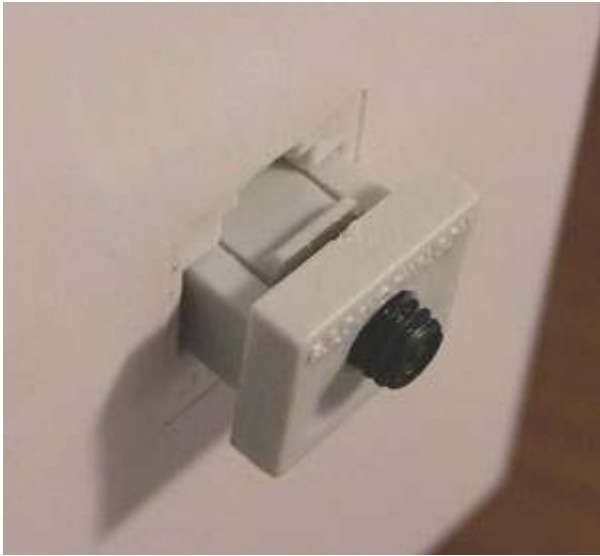


Image1



Image 2

1. To set up the RJ45 Jack Lock for installation: place the set screw in the lock and turn it two rotations to secure the screw.
2. Now place the RJ45 Jack Lock into the jack. (Image 1)
3. Make sure the RJ45 Jack Lock is placed tightly against the jack. (Image 2)
4. To secure the RJ45 Jack Lock turn the set screw until it is just about flush to the jack.
5. To remove the RJ45 Jack Lock all you have to do is unscrew the set screw and remove the lock. (The RJ45 Lock is reusable)

*Note: If you turn the set screw to far you might jam the plastic clip into the jack. Don't worry it won't damage the jack. You might have to use a paper clip to un-jam the lock when you want to remove it. Just unscrew the set screw all the way and insert the paperclip to push the clip back down.

